

# REACH OUT & VOTE

GEORGE WASHINGTON	<input checked="" type="checkbox"/>
JOHN ADAMS	<input type="checkbox"/>
PATRICK HENRY	<input type="checkbox"/>
SAMUEL ADAMS	<input type="checkbox"/>
THOMAS JEFFERSON	<input type="checkbox"/>
PAUL REVERE	<input type="checkbox"/>



**TOUCH** anywhere in the box that contains the name of your choice. Confirm that a green check mark appears in the circle located in the box in which your choice appears.

## YOU MAY CHANGE

your vote by touching the same selection again. The candidate is unselected and all circles for that contest appear again.

GEORGE WASHINGTON	<input type="checkbox"/>
JOHN ADAMS	<input type="checkbox"/>
PATRICK HENRY	<input type="checkbox"/>
SAMUEL ADAMS	<input type="checkbox"/>
THOMAS JEFFERSON	<input type="checkbox"/>
PAUL REVERE	<input type="checkbox"/>



## WRITE-IN

the name of a qualified candidate by touching **WRITE-IN** on the candidate list. When the on-screen keyboard appears, key in the candidate's name, then touch **OK**. The write-in candidate's name now appears on the list of candidates.



## CONTINUE



to the following page by touching **NEXT** at the bottom right of the screen. To return to the previous page, touch **BACK** at the bottom left of the screen.

TOUCH THE OFFICE OR ISSUE TO MAKE A CHANGE

PRESIDENT	THOMAS JEFFERSON
UNITED STATES SENATOR	JOHN ADAMS
SECRETARY OF STATE	No Selection Made



**REVIEW** a summary of all your votes on the **REVIEW** page. To make a change, touch the office or issue to return to the ballot page for that race.

## COMPLETE

your voting by touching the yellow square on the final screen.

**YOUR BALLOT IS NOW CAST!**



# Special Voting Situations

---

## HOW TO CAST A WRITE-IN VOTE

**STEP 1** Press the “Write-In” button.

**STEP 2** An on-screen keyboard appears. Type the name by pressing the buttons on the keyboard.

**WRITE-IN KEYBOARD**

1	2	3	4	5	6	7	8	9	0	-	←
Q	W	E	R	T	Y	U	I	O	P	/	
A	S	D	F	G	H	J	K	L	'		
Z	X	C	V	B	N	M	,	.			
SPACE											

Cancel

OK

**STEP 3** When you are finished, press the OK button. After pressing OK, you are automatically returned to the ballot. To cancel the Write-In, simply press the checkmark, the checkmark will disappear and a new choice can be made.