

ES&S iVotronic Voting System

The Write-In Vote

The Write-In Vote screen appears when the voter selects a write-in option.

Write-In Vote Screen

Write-In Instructions
Press letters and (Space) as desired.
Press (Backspace) to remove mistakes.
Press Accept or Cancel when you are done.

A B C D E F G H I J
K L M N O P Q R S
T U V W X Y Z
0 1 2 3 4 5 6 7 8 9
, . - >

SPACE

CANCEL ACCEPT

The voter touches letters and numbers on the Write-In Vote screen to spell the name of a desired candidate. The voter touches **ACCEPT** to cast the write in vote and return to the ballot. The name of the write-in candidate appears in place of the empty write-in space with an X in the ballot target.

To cancel a Write-In selection, the voter presses the corresponding ballot target or name a second time. The blank write-in space reappears. The voter may then vote for another candidate, or press the Write-In vote box again to select another Write-In candidate.